

CABLE STATIONS AND MACHINE OWNER'S MANUAL
DUAL ADJUSTABLE PULLEY



intenra

Table of Contents

1	IMPORTANT SAFETY INSTRUCTIONS	2
1.1	Important Operation Instructions for Owners	2
1.2	Important Safety Instructions for Users	3
1.3	Warning Label Locations	4
2	INSTALLATION AND ASSEMBLY	5
2.1	Product Information	5
2.2	Place of Installation	6
2.3	Assembly Guide	6
3	CARE AND MAINTENANCE	23
3.1	Commercial Maintenance Schedule	23
3.2	Daily Inspection & Maintenance	24
3.3	Weekly Inspection & Maintenance	24
3.4	Other Scheduled Preventive Maintenance	25
3.5	Clean the Equipment	25
3.6	Cable inspection & Maintenance	26

IMPORTANT SAFETY INSTRUCTIONS

It is the sole responsibility of the purchaser of Intenza products to instruct all individuals, whether they are the end user or supervising personnel on proper usage of the equipment.

It is recommended that all users of Intenza exercise equipment be informed of the following information prior to its use.

1.1 Important Operation Instructions for Owners

Follow these guidelines to maintain proper working condition of the equipment—

IMPORTANT Do not modify the equipment or any of its parts, or permanently remove any part from the equipment. Do not use accessory attachments that are not recommended by Intenza, as such attachments might cause injuries.

- Qualified technicians must perform all regular maintenance.
- Do not remove warning labels for any reason. They contain important information. If unreadable or missing, contact your Intenza dealer for a replacement.
- Check that all fasteners are securely tightened. Cables should be secured at both end connections and properly threaded. Weight stacks should be secure and functioning properly. Handle attachments should be properly connected.
- Make sure that trainers, facility personnel, and maintenance technicians understand how to use the equipment, know important safety guidelines, and can recognize potential problems such as loose hardware, or cracked weld. If any staff member witnesses unsafe use of the equipment, he or she should address the user directly, demonstrate the proper technique, and review the Important Safety Instructions for Users.
- Intenza recommends posting a copy of the Important Safety Instructions for Users near the equipment in a prominent location.
- Place an “out—of—order” sign on the equipment during maintenance of the equipment or the surrounding area. Users should never be allowed to operate the equipment until it has been inspected and works properly. If a piece of equipment needs service, keep it out of use until it is repaired. Place an “out—of—order” sign on the equipment and make sure the facility’s personnel know not to allow anyone to use the equipment until it is working properly.
- When working with the weight stacks, do not attempt to free any jammed assemblies without assistance as this may cause injury.
- NEVER use this machine with the weight stack pinned in an elevated position.
- Do not place the equipment outdoors or on wet surfaces.

1.2 Important Safety Instructions for Users

Read all instructions before using the equipment. These instructions were written to ensure your safety and to protect the equipment. Equipment is intended for commercial use.

Before beginning any fitness program, you should obtain a complete physical examination from your physician.

When using exercise equipment, you should always take basic precautions, including the following—

- If you do not understand how to operate a piece of equipment, ask someone from the facility such as a trainer to demonstrate how to use it and explain any safety instructions.
- Do not allow children on or near the equipment. Do not leave children unsupervised around the equipment.
- Use the equipment only for its intended purpose. Do not use accessory attachments that are not recommended by the manufacturer, as such attachments may cause injuries.
- Wear proper exercise clothing and shoes during a workout: no garments that impede perspiration and no loose clothing. Tie long hair back. Keep garments or towels away from moving parts.
- Do not overexert yourself or work to exhaustion. Use reasonable judgment when working with weights. Avoid using excessive weight, which may cause injury.
- If you feel pain, faintness, dizziness, or abnormal symptoms, stop exercising immediately and consult your physician.
- Keep head, limbs, fingers, and hair clear of all moving parts while the equipment is in use. Keep hands clear of racking pegs.
- Never drop or insert objects into any opening in the equipment.
- Check that all fasteners are securely tightened. Cables should be secured at both end connections and properly threaded. Weight stacks should be secure and functioning properly. Handle attachments should be properly connected. Pay particular attention to the condition of cables and cable ends. If you notice a loose cable end or any fraying of the cable or cable jacket, do not use the product and contact someone in the facility immediately.
- Always check the equipment before using it. If you spot a potential problem, contact someone in the facility immediately. Do not use the equipment until the facility has verified that the equipment is working properly. Do not attempt to fix broken or jammed equipment.
- Do not use the equipment outdoors or on wet surfaces.
- Do not drop or slam the weight stack while exercising.
- Be sure the selector pin is completely inserted. Use only the pin provided by the manufacturer. If unsure, contact someone in the facility.
- Never pin the weights in an elevated position. Do not use the equipment if the top plate or weight stack is pinned in a raised position. Notify the facility's personnel to repair the equipment and ensure that it is working properly.

1.3 Warning Label Locations

WARNING

During all operations involving transport, maintenance and cleaning, pay attention to any part of the equipment where body parts may become trapped. Attention must be paid to the labels attached to the equipment, as they provide information about possible risks and hazards. We recommend immediately replacing the labels when they become damaged or difficult to read.


WARNING

SERIOUS INJURY CAN OCCUR ON THIS EQUIPMENT. YOU MUST FOLLOW THESE PRECAUTIONS TO AVOID INJURY !

1. Before using, read all the warnings and obtain instruction on the use of this machine. Use only for intended exercise. **DO NOT** modify the machine.
2. Obtain a medical exam before beginning any exercise program.
3. Children must not be allowed near this machine. Supervise teenagers.
4. Inspect the machines before use. **DO NOT** use if it appears damaged. **DO NOT** attempt to fix a broken or jammed machine. Notify staff immediately.
5. Inspect cables and their connections before using machine. **DO NOT** attempt to fix. Seek assistance.
6. Keep body, hair and clothing free of all moving objects.
7. Be certain that weight pin is completely inserted. Use only the pin provided by the manufacturer. If unsure, seek assistance.
8. Never pin the weights or prop plate into an elevated position. **DO NOT** use the machine if found in this condition. **DO NOT** attempt to fix. Seek assistance.
9. Use only the incremental weights supplied by the manufacturer. **DO NOT** use dumbbells or other means to add resistance to the machine.
10. **DO NOT REMOVE THIS LABEL. REPLACE IF DAMAGED.**


WARNING

SPRING PIN MUST BE FULLY ENGAGED

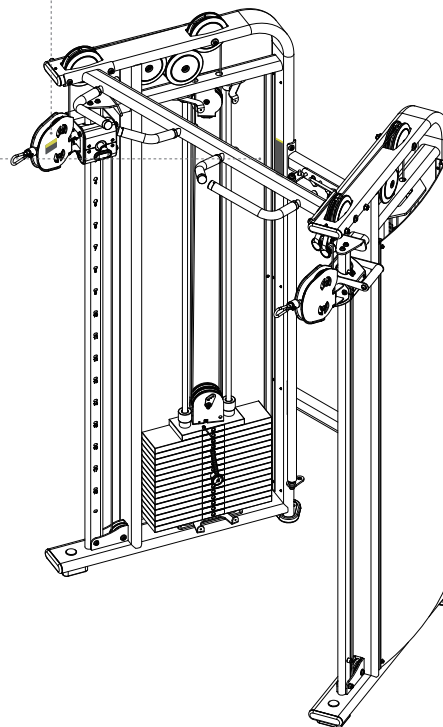

WARNING


SPRING PIN MUST BE FULLY ENGAGED

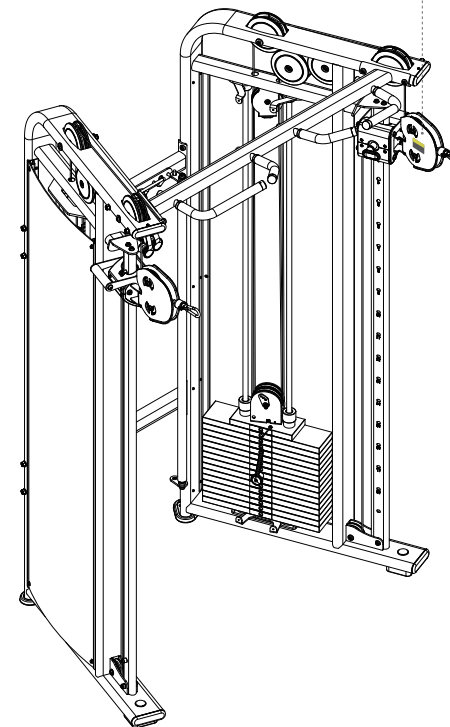

2. Installation and Assembly

2.1 Product Information


SERIAL NUMBER LABEL LOCATION

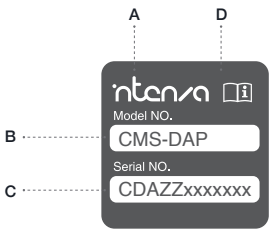

ASSEMBLY DIMENSIONS

A	Manufacturer's name	LENGTH	156 cm	61.4 inches
B	Model number	WIDTH	112 cm	44 inches
C	Serial number	HEIGHT	237 cm	93.3 inches
D	Consultation of user manual required	EQUIPMENT WEIGHT	515 kg	1135 lbs
		WEIGHT STACK	286 kg	630 lbs
		LIVE AREA	1025 x 540 x 283 cm	404 x 213 x 111.3 inches

LIVE AREA

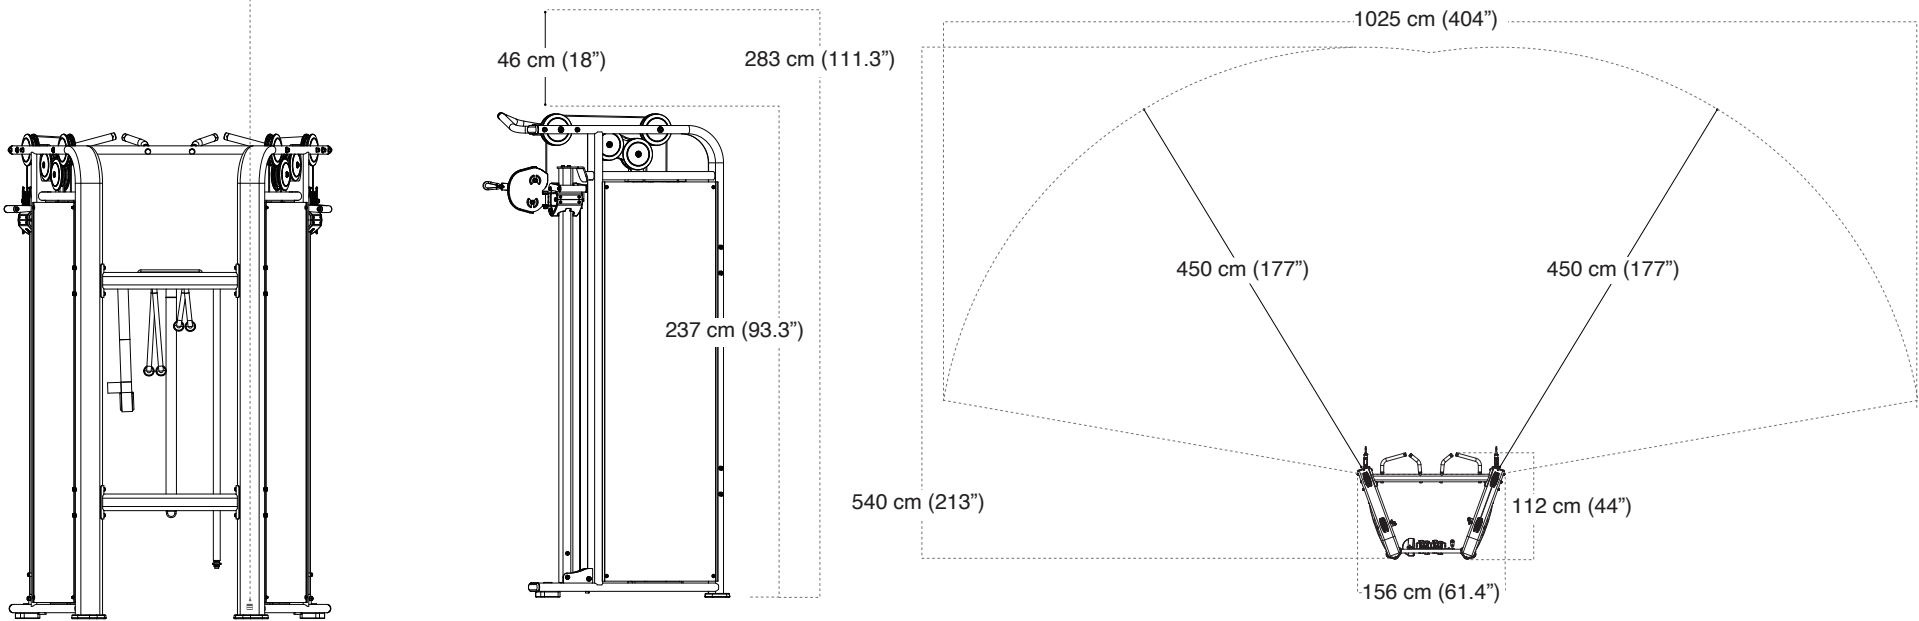

2.2 Place of Installation

To ensure safe, comfortable and effective use of the equipment, the place of installation must comply with certain specific requirements. In particular, before choosing where to install the equipment we recommended that you check the following conditions are available—

- A temperature between +10°C and +25°C.
- Sufficient ventilation to maintain a humidity level between 20% and 90%, when the equipment is in use.
- Sufficient lighting to make the area a safe and relaxing place to exercise.
- Sufficient clearance on all sides of the equipment, taking into account its maximum dimensions when in use, to ensure safety.
- A flat, stable and vibration—free floor surface, with sufficient load bearing capacity for the equipment's weight.
- If the equipment is to be installed in a public recreation area, the place of installation must comply with all the requirements of the regulations currently in force.

WARNING

The equipment must be installed and used in a place where access and supervision are specifically controlled by the owner. When installing the equipment, use suitable personal protective equipment.

2.3 Assembly Guide

UNPACKING

Thank you for purchasing a Intenza product. Your Intenza product is inspected before it is packaged. It is shipped in multiple pieces to facilitate the compact packaging of the machine. Prior to assembly, confirm all the components by matching them with the part list. Carefully unpack the unit from this box and dispose of the packing materials in accordance with your local laws.

CAUTION

 
The weight of the product is heavy. To avoid injury to yourself and prevent damage to the frame components, be sure to have proper assistance removing the frame pieces from this box. Please be sure to install the equipment on a stable base, properly level the machine and leave at least two feet of clearance to enter and exit the machine.

2.3 Assembly Guide


TOOLS



1. Allen Wrench, 4mm, 5mm, 6 mm




 2. Open Wrench/Adjustable Wrench
17 mm, 19mm




3. Screwdriver


PART LIST

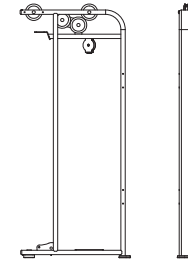

 
1. Ptd Assy, Dap Side Frame
QTY 2



 
2. Ptd Assy, Dap Lower Cross Brace
QTY 1



 
3. Ptd Assy, Dap Upper Cross Brace
QTY 1



 
4. Washer, 3/8" Sae Curved
QTY 24



 
5. Bolt, 3/8—16 x 6-1/4" (159mm)
Socket Head
QTY 12



 
6. Nut, 3/8—16 Lk St Zn
QTY 14



 7. Ptd Assy, Dap Chin—up
QTY 1



8. Wldmt, Dap Carriage Upright
QTY 2

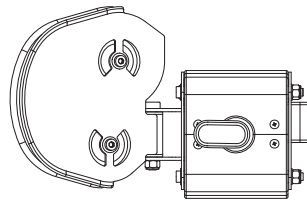


9. Ptd Assy, Rh Carriage
QTY 1



10. Bushing, Stop
QTY 4



11. Bolt, 3/8—16 x 1" (25mm)
Socket Head W/np
QTY 8

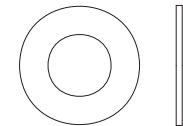


12. Washer, Flat 3/8 Sae St Zn
QTY 12


2.3 Assembly Guide




**13. Bolt, 3/8—16 x 2—1/4" (57mm)
Socket Head
QTY 2**

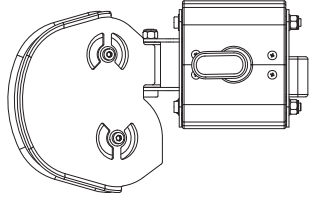


**14. Ptd Assy, Lh Carriage
QTY 1**

 

 
**15. Extrusion, Aluminum—Dap
Shroud
QTY 4**




**16. Screw, 10—32 x 3/8" (9mm) Pan
Head W/np
QTY 20**

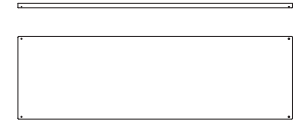


**17. Assy, Dap Rear Shroud
QTY 2**

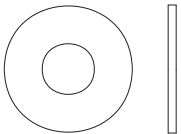

 
**18. Washer, Flat 1/4 Sae St Zn
QTY 8**



 
**19. Bolt, 1/4—20 x 1/2" (13mm)
Socket Head W/np
QTY 8**




**20. Guide Rod, 19 Dia x 1978
QTY 4**

 

**21. Ptd Assy, 20 Lb Weight Plate
QTY 30**

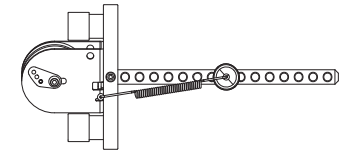

**22. Assy, Dap Head Plate
QTY 2**

 

**23. Plate, Cap Guide Rod Support
QTY 2**




**24. Label, Weight Stack 1/4 Ratio
20lbs
QTY 2**



**25. Shaft Collar, Guide Rod
QTY 4**



**26. Bushing, Guide Rod Retainer
QTY 4**

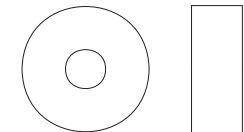


**27. Cushion, Weight Stack
QTY 4**

2.3 Assembly Guide



 
**28. Bolt, 3/8—16 x 3/4" (19mm)
Socket Head W/np
QTY 4**




**29. Strap, Dap Chin Assist
QTY 1**



**30. Cable Assy, Dap
QTY 2**

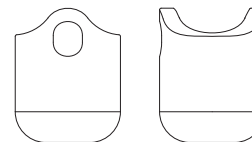


**31. Housing, Cable End Coupler
QTY 2**

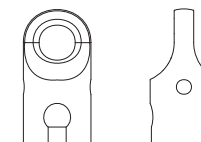

**32. AI Core, Cable End Coupler
QTY 2**



 
**33. Cap Screw, M5 x 0.8 x 6mm,
Socket Head
QTY 4**



**34. Snap Hook, 8mm Dia x 80mm
QTY 2**



 
**35. Grommet, Rubber Cable
QTY 2**



**36. Straight Bar, 54"
QTY 1**



**37. Assy, Leg Boot D—ring
QTY 1**

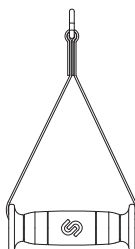


**38. Assy, Short Strap Handle
QTY 2**



**39. Assy, Medium Strap Handle
QTY 2**

2.3 Assembly Guide

STEP 1

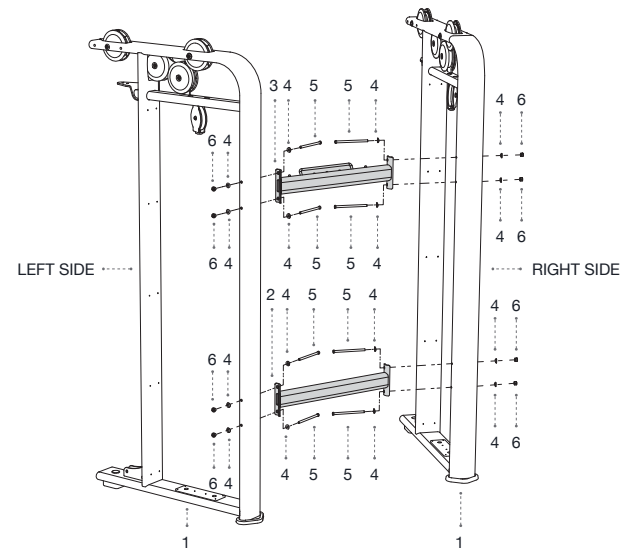

LOOSELY TIGHTEN THE BOLT CONNECTIONS FOR THIS STEP


COMPONENTS

Ptd Assy, Dap Side Frame (1), Ptd Assy, Dap Lower Cross Brace (2),
Ptd Assy, Dap Upper Cross Brace (3), Washer, 3/8" Sae Curved (4),
Bolt, 3/8—16 x 6—1/4" (159mm) Socket Head (5),
Nut, 3/8—16 Lk St Zn (6)

NOTE

The dap side frame with warning label and serial number label should be assembled on the right side.

STEP 2

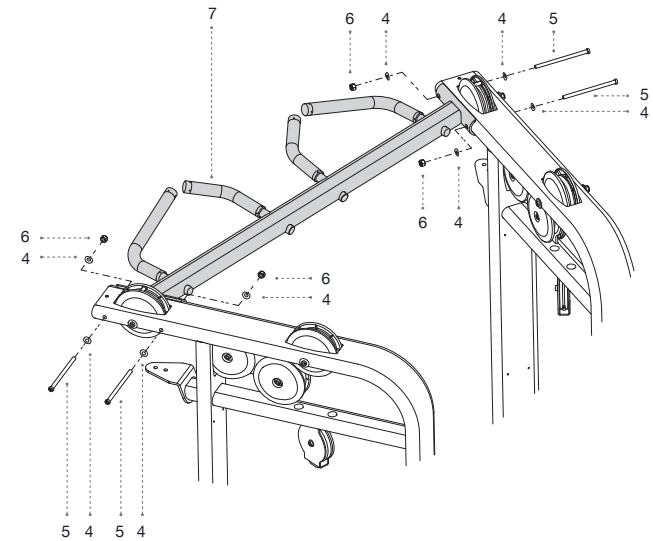


SECURELY TIGHTEN ALL BOLT CONNECTIONS FROM STEP 1 AND 2

COMPONENTS

Washer, 3/8" Sae Curved (4),
Bolt, 3/8—16 x 6—1/4" (159mm) Socket Head (5),
Nut, 3/8—16 Lk St Zn (6), Ptd Assy, Dap Chin—up (7)

2.3 Assembly Guide

STEP 3

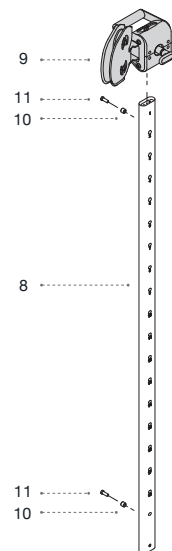


RIGHT SIDE—SECURELY TIGHTEN ALL BOLT CONNECTIONS

COMPONENTS

Wldmt, Dap Carriage Upright (8), Ptd Assy, Rh Carriage (9),
Bushing, Stop (10), Bolt, 3/8—16 x 1" (25mm) Socket Head W/np (11)

STEP 4

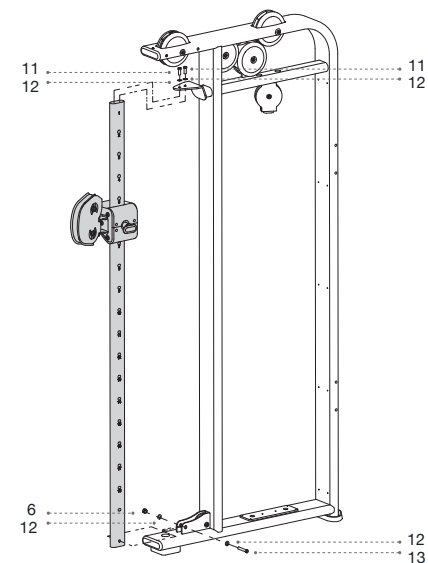


RIGHT SIDE—SECURELY TIGHTEN ALL BOLT CONNECTIONS

COMPONENTS

Nut, 3/8—16 Lk St Zn (6),
Bolt, 3/8—16 x 1" (25mm) Socket Head W/np (11),
Washer, Flat 3/8 Sae St Zn (12),
Bolt, 3/8—16 x 2—1/4" (57mm) Socket Head (13)

2.3 Assembly Guide

STEP 5

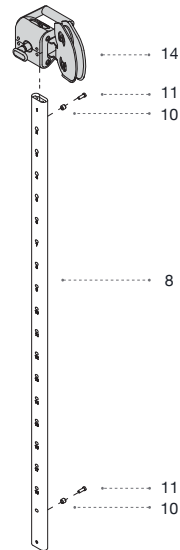


LEFT SIDE—SECURELY TIGHTEN ALL BOLT CONNECTIONS

COMPONENTS

Wldmt, Dap Carriage Upright (8), Bushing, Stop (10),
Bolt, 3/8—16 x 1" (25mm) Socket Head W/np (11),
Ptd Assy, Lh Carriage (14)

STEP 6

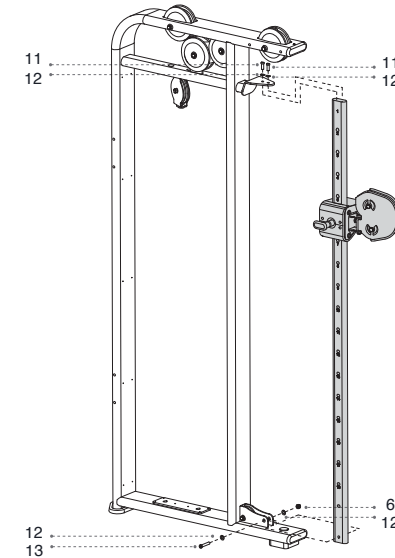


LEFT SIDE—SECURELY TIGHTEN ALL BOLT CONNECTIONS

COMPONENTS

Nut, 3/8—16 Lk St Zn (6),
Bolt, 3/8—16 x 1" (25mm) Socket Head W/np (11),
Washer, Flat 3/8 Sae St Zn (12),
Bolt, 3/8—16 x 2—1/4" (57mm) Socket Head (13)

2.3 Assembly Guide


STEP 7

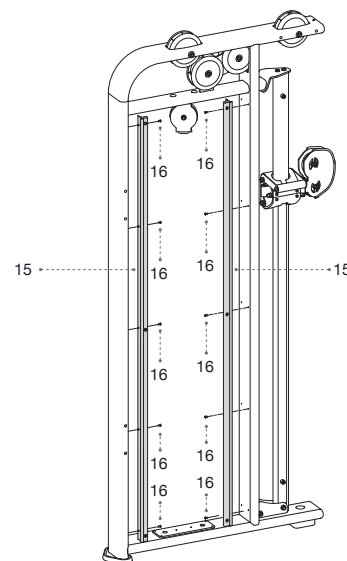

**RIGHT SIDE—SECURELY TIGHTEN ALL BOLT CONNECTIONS
COMPONENTS**

Extrusion, Aluminum—Dap Shroud (15),
Screw, 10—32 x 3/8" (9mm) Pan Head W/np (16)

STEP 8

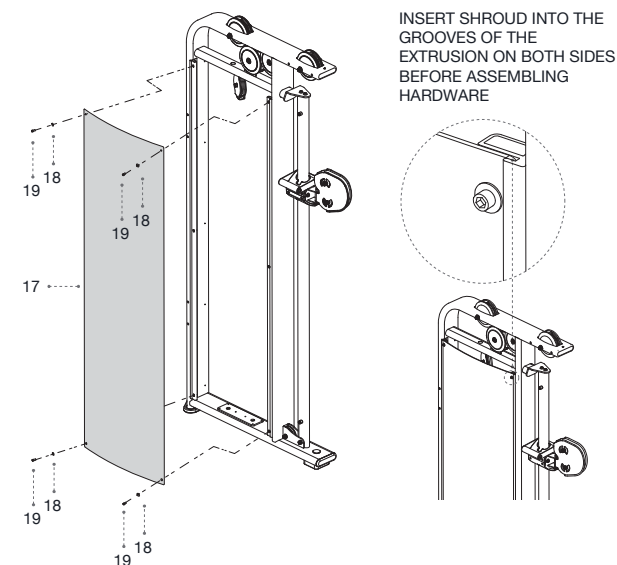


**RIGHT SIDE—SECURELY TIGHTEN ALL BOLT CONNECTIONS
COMPONENTS**

Assy, Dap Rear Shroud (17), Washer, Flat 1/4 Sae St Zn (18),
Bolt, 1/4—20 x 1/2" (13mm) Socket Head W/np (19)

2.3 Assembly Guide


STEP 9

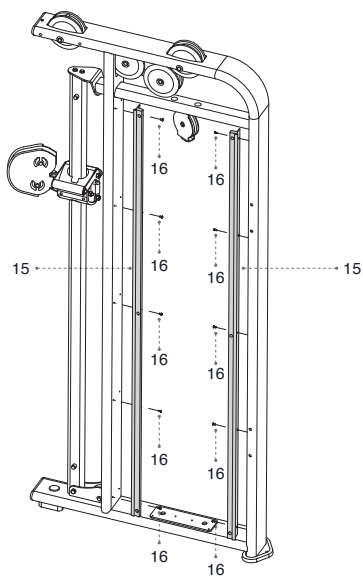

LEFT SIDE—SECURELY TIGHTEN ALL BOLT CONNECTIONS
COMPONENTS

Extrusion, Aluminum—Dap Shroud (15),
 Screw, 10—32 x 3/8" (9mm) Pan Head W/np (16)

STEP 10

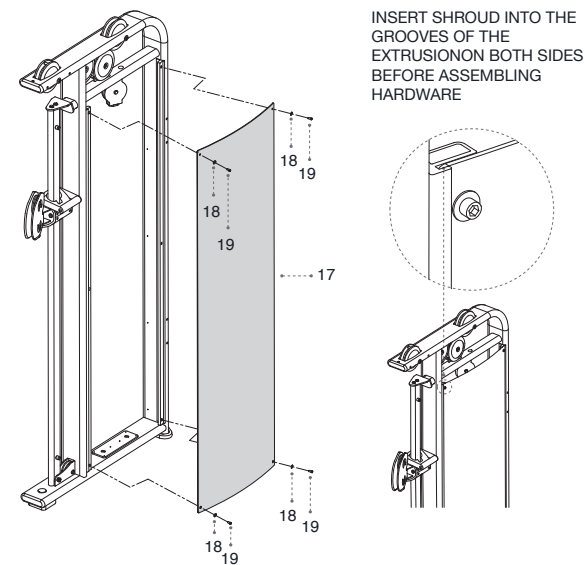



INSERT SHROUD INTO THE
 GROOVES OF THE
 EXTRUSION ON BOTH SIDES
 BEFORE ASSEMBLING
 HARDWARE

LEFT SIDE—SECURELY TIGHTEN ALL BOLT CONNECTIONS
COMPONENTS

Assy, Dap Rear Shroud (17), Washer, Flat 1/4 Sae St Zn (18),
 Bolt, 1/4—20 x 1/2" (13mm) Socket Head W/np (19)

2.3 Assembly Guide

STEP 11

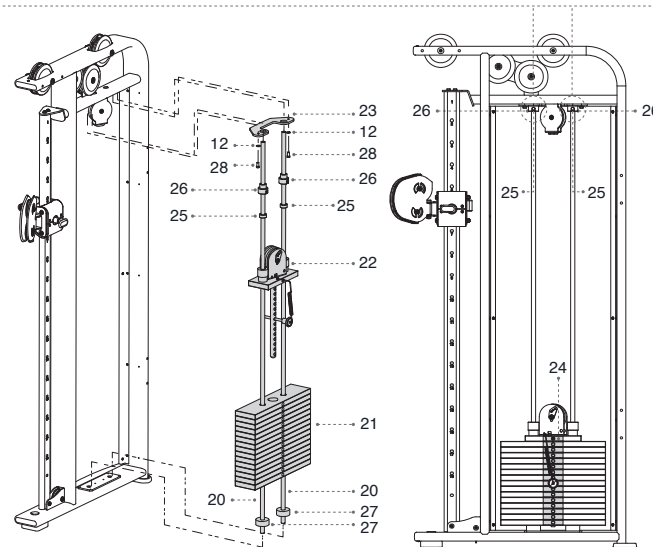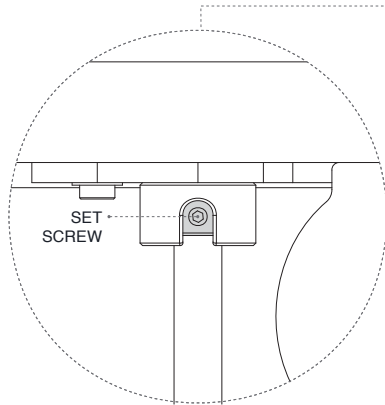

RIGHT SIDE—SECURELY TIGHTEN ALL BOLT CONNECTIONS


COMPONENTS

Washer, Flat 3/8 Sae St Zn (12), Guide Rod, 19 Dia x 1978 (20),
Ptd Assy, 20 Lb Weight Plate (21), Assy, Dap Head Plate (22),
Plate, Cap Guide Rod Support (23),
Label, Weight Stack 1/4 Ratio 20lbs (24), Shaft Collar, Guide Rod (25),
Bushing, Guide Rod Retainer (26), Cushion, Weight Stack (27),
Bolt, 3/8—16 x 3/4" (19mm) Socket Head W/np (28)

NOTE

Remember to tighten set screws on all shaft collars.

STEP 12

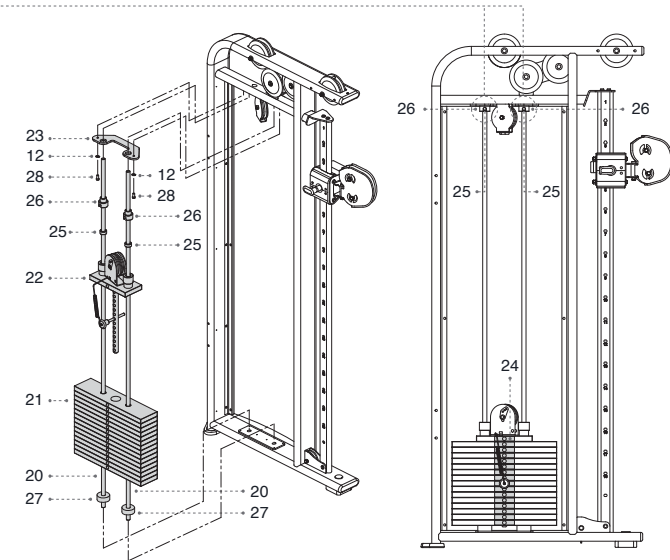

LEFT SIDE—SECURELY TIGHTEN ALL BOLT CONNECTIONS

COMPONENTS


Washer, Flat 3/8 Sae St Zn (12), Guide Rod, 19 Dia x 1978 (20),
Ptd Assy, 20 Lb Weight Plate (21), Assy, Dap Head Plate (22),
Plate, Cap Guide Rod Support (23),
Label, Weight Stack 1/4 Ratio 20lbs (24), Shaft Collar, Guide Rod (25),
Bushing, Guide Rod Retainer (26), Cushion, Weight Stack (27),
Bolt, 3/8—16 x 3/4" (19mm) Socket Head W/np (28)

NOTE

Remember to tighten set screws on all shaft collars.


2.3 Assembly Guide

STEP 13A

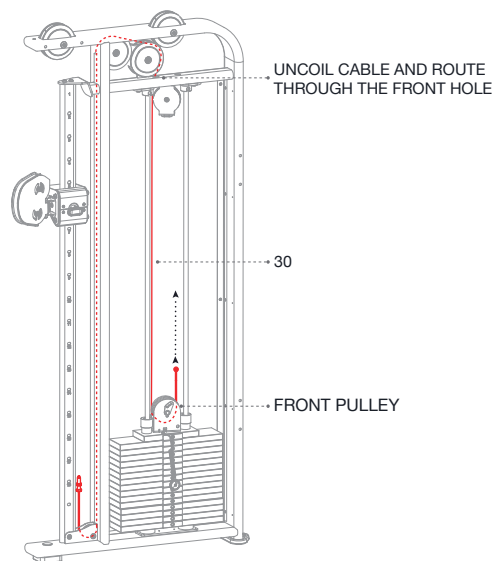

RIGHT SIDE—CABLE ROUTING COMPONENTS
Cable Assy, Dap (30)


STEP 13B

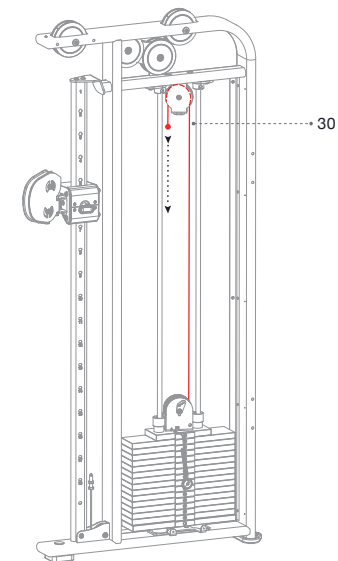

RIGHT SIDE—CABLE ROUTING COMPONENTS
Cable Assy, Dap (30)


2.3 Assembly Guide

STEP 13C

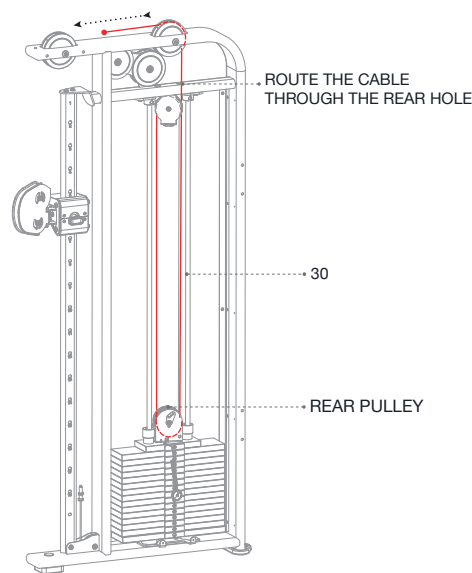

RIGHT SIDE—CABLE ROUTING
COMPONENTS
Cable Assy, Dap (30)


STEP 13D

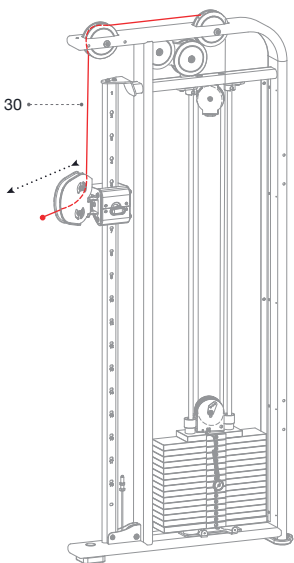

RIGHT SIDE—CABLE ROUTING
COMPONENTS
Cable Assy, Dap (30)

2.3 Assembly Guide

STEP 14

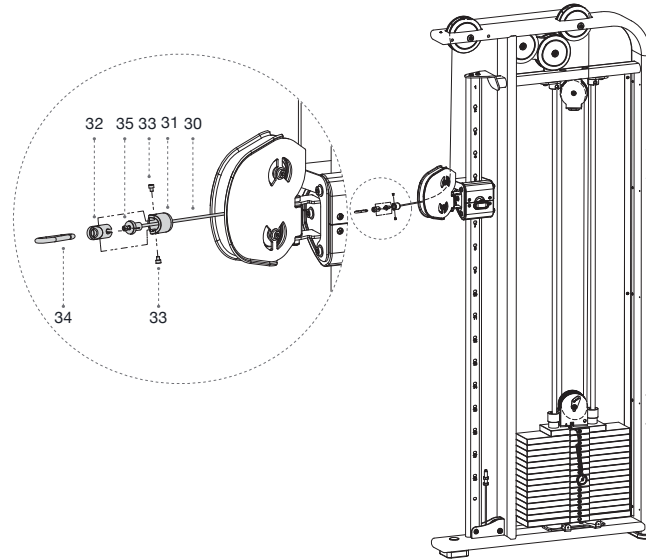


RIGHT SIDE—SECURELY TIGHTEN ALL BOLT CONNECTIONS

COMPONENTS

Cable Assy, Dap (30), Housing, Cable End Coupler (31),
AI Core, Cable End Coupler (32),
Cap Screw, M5 x 0.8 x 6mm, Socket Head (33),
Grommet, Rubber Cable (35)

STEP 15

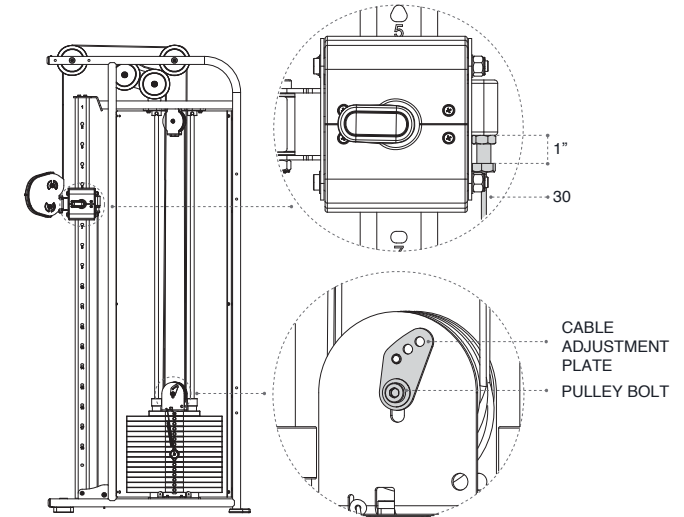

RIGHT SIDE—TO TAKE SLACK OUT OF THE CABLE, FOLLOW THESE STEPS

1. LOOSEN PULLEY BOLT ENOUGH TO ROTATE THE CABLE ADJUSTMENT PLATE
2. PUSH DOWN ON THE PULLEYS WHILE ROTATING CABLE ADJUSTMENT PLATE COUNTER—CLOCKWISE INTO THE 2ND OR 3RD ADJUSTMENT HOLE
3. SECURELY TIGHTEN PULLEY BOLT

COMPONENTS

Cable Assy, Dap (30)


CAUTION

A minimum of 1 inch (25.4mm) of the threaded portion of the cable bolt must be threaded into the carriage.

No more than 1 inch (25.4 mm) of the threaded portion of the cable bolt should be visible.


2.3 Assembly Guide

STEP 16A

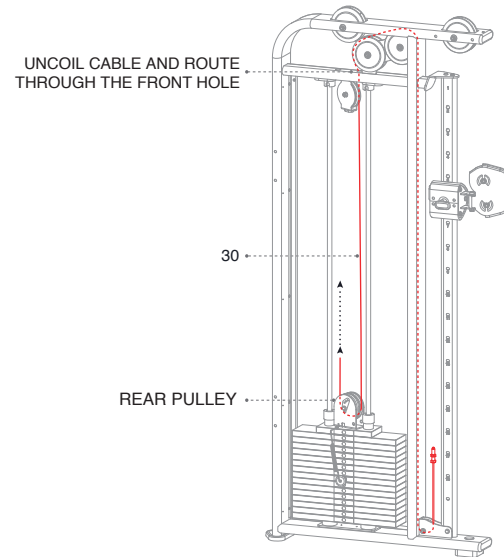

LEFT SIDE—CABLE ROUTING
COMPONENTS
Cable Assy, Dap (30)


STEP 16B

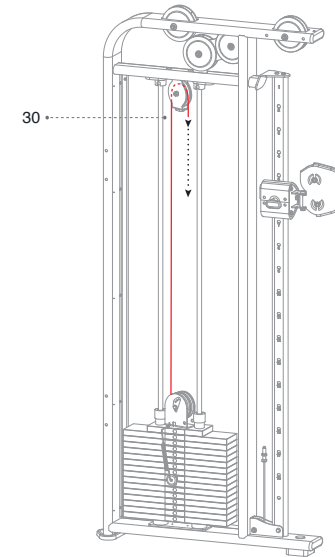

LEFT SIDE—CABLE ROUTING
COMPONENTS
Cable Assy, Dap (30)


2.3 Assembly Guide

STEP 16C

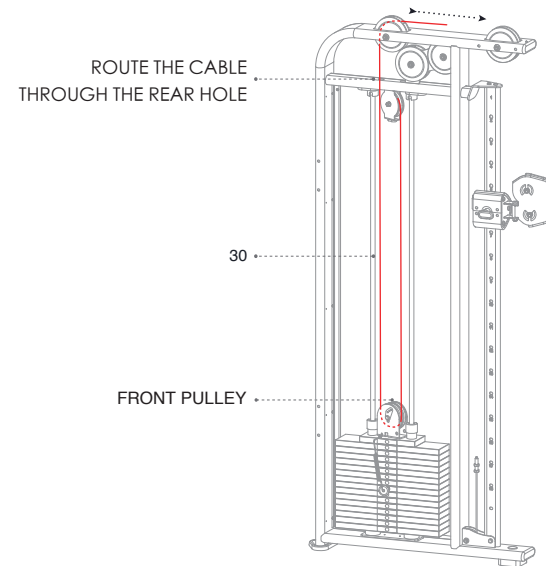

LEFT SIDE—CABLE ROUTING
COMPONENTS
Cable Assy, Dap (30)


STEP 16D

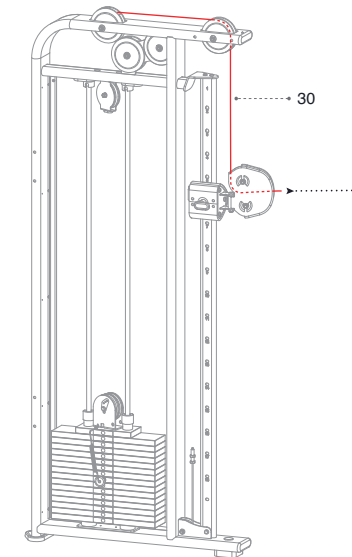

LEFT SIDE—CABLE ROUTING
COMPONENTS
Cable Assy, Dap (30)

2.3 Assembly Guide

STEP 17

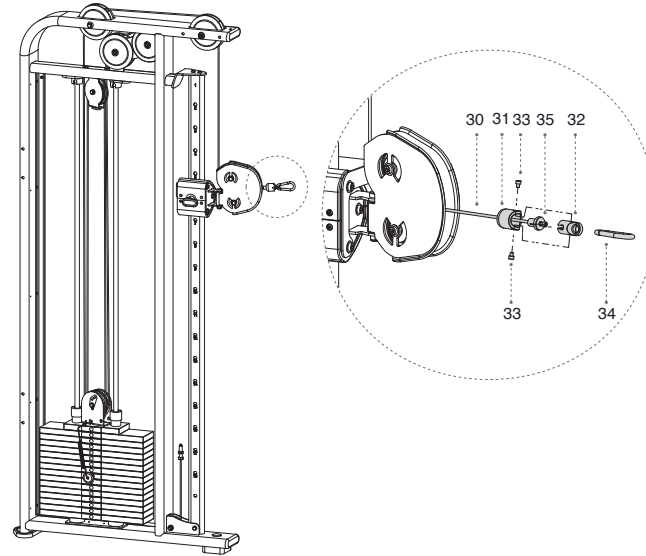


LEFT SIDE—SECURELY TIGHTEN ALL BOLT CONNECTIONS

COMPONENTS

Cable Assy, Dap (30), Housing, Cable End Coupler (31),
Al Core, Cable End Coupler (32),
Cap Screw, M5 x 0.8 x 6mm, Socket Head (33),
Grommet, Rubber Cable (35)

STEP 18

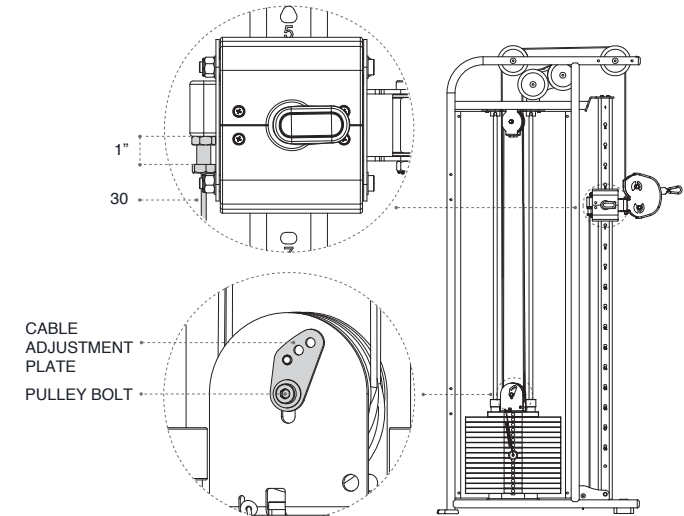

LEFT SIDE—TO TAKE SLACK OUT OF THE CABLE, FOLLOW THESE STEPS

1. LOOSEN PULLEY BOLT ENOUGH TO ROTATE THE CABLE ADJUSTMENT PLATE
2. PUSH DOWN ON THE PULLEYS WHILE ROTATING CABLE ADJUSTMENT PLATE COUNTER—CLOCKWISE INTO THE 2ND OR 3RD ADJUSTMENT HOLE
3. SECURELY TIGHTEN PULLEY BOLT

COMPONENTS

Cable Assy, Dap (30)


CAUTION

A minimum of 1 inch (25.4mm) of the threaded portion of the cable bolt must be threaded into the carriage.

No more than 1 inch (25.4 mm) of the threaded portion of the cable bolt should be visible.

2.3 Assembly Guide

STEP 19

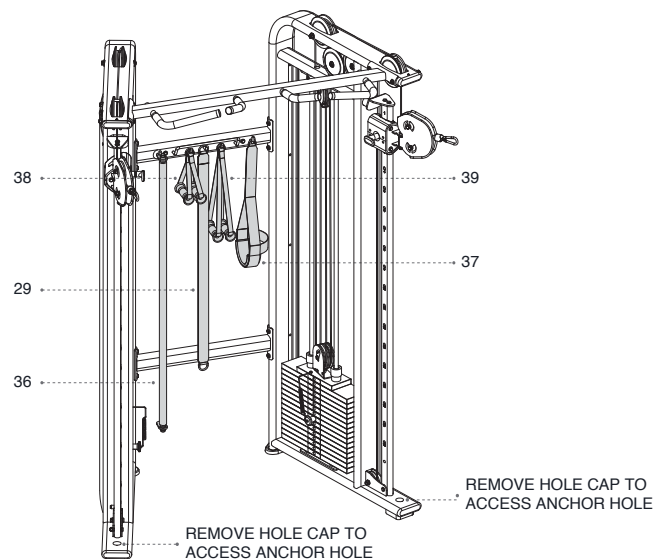

SECURELY ANCHOR THE MACHINE TO THE FLOOR USING THE ANCHOR HOLES PROVIDED

NOTE

Consult a professional contractor for the actual anchoring of the machine

COMPONENTS

Straight Bar, 54" (36), Assy, Leg Boot D—ring (37),
Assy, Short Strap Handle (38), Assy, Medium Strap Handle (39),
Strap, Dip Chin Assist (29)

3. Care and Maintenance

3.1 Commercial Maintenance Schedule

INSPECT	DAILY	WEEKLY	MONTHLY	6 MONTHS	ANNUALLY
Cables for wear, tension, and proper connection.	•				
All adjustment pins, weight stack pins, set screws, gas shocks, snap links, and pulleys.	•				
All safety and instructional decals.	•				
All weight stack shrouds.	•				
All nuts and bolts and tighten if needed.		•			
All anti-slip surfaces and replace as needed.		•			
All accessory bars and handles.		•			
CLEAN					
Upholstery	•				
Guide rods and lubricate with a teflon lubricant			•		
LUBRICATE					
Pivot bearings and linear bearings				•	
REPLACE					
Cables					•

BEFORE YOU BEGIN

Preventative maintenance is crucial to maintaining the function and safety of this equipment. Your facility must establish written guidelines for preventative maintenance and keep written or online records of the maintenance performed on these products. As a minimum, the items presented in the Safety Instructions section of this document and the items that follow here, should be included in your maintenance program.

 
IMPORTANT Always purchase replacement parts and hardware from Intenza. Many parts are tested and manufactured specifically for Intenza commercial strength equipment. If you use parts not approved by Intenza, you could void the Intenza Limited Warranty. Use of parts not approved by Intenza may cause injury. Intenza recommends that maintenance technicians thoroughly read and understand the safety guidelines and maintenance procedures covered in this manual.

NOTE If the equipment requires assembly, please refer to 2.3 Assembly Guide Section in this manual.


TOOLS



1. ALLEN WRENCH, 4MM, 5MM, 6 MM



 2. OPEN WRENCH/ADJUSTABLE WRENCH
17 MM, 19MM



3. SCREWDRIVER

3.2 Daily Inspection & Maintenance

The following items are critical to the safety of users and maintenance staff as well as ensuring the optimum performance of the machines. These inspections should be performed each day before the equipment is subject to use. Intenza is not responsible for performing or scheduling regular maintenance or inspections.

- Inspect cables for wear, tension, and proper connection (See 3.6 Cable Inspection & Maintenance Section) if equipped.
- Inspect all adjustment pins, weight stack pins, set screws, gas shocks, snap links, and pulleys if equipped.
- Inspect all safety and instructional decals.
- Inspect all weight stack shrouds if equipped.
- Verify that rubber hand grips are intact and secure.
- Verify that anti-skid foot grips are intact and secure.
- Verify that the weight stack selector pin is attached with the coiled lanyard to the top plate if equipped.

3.3 Weekly Inspection & Maintenance

The following items are critical to the safety of users and maintenance staff as well as ensuring the optimum performance of the machines. These inspections should be performed each week. Intenza is not responsible for performing or scheduling regular maintenance or inspections.

- Check entire length of cables and end fittings for any signs of wear if equipped. Replace immediately as required. (3.6 Cable Inspection & Maintenance Section).
- Verify that a minimum of 1 inch (25.4 mm) of the threaded portion of the cable bolt is threaded into the carriage and that the nut is tightened if equipped with a cable. (See 3.6 Cable Inspection & Maintenance Section).
- Perform a function test by placing the selector pin in the top plate and cycling the machine through the intended motion if equipped with a cable. Verify that the machine operates smoothly without binding. Select a moderate weight and repeat.
- Verify that each pulley rotates freely when performing the exercise if equipped with pulleys. A pulley that does not rotate will cause extreme cable wear and could lead to cable failure. Determine cause and remedy immediately.
- Verify that the adjustment pop pins retract easily and fully engage (when released) into each adjustment disc hole/slot. The pop pins are spring loaded so they should return to the engaged position when you release the knob.
- Verify that the adjustment pin disengages and engages freely when actuating the adjustment mechanism. Be sure that the adjustment pin inserts fully into the adjustment disc.
- Verify that all hardware is tightened and that associated frame members are secure. Apply a few small drops of a thread locking compound such as Loctite on any loose bolts.
- Inspect frame for integrity and function. Replace any components at the first sign of wear with only Intenza supplied parts.

3.4 Other Scheduled Preventive Maintenance

Intenza recommends that scheduled maintenance be performed by a qualified service technician. Please contact your dealer or visit www.intenzafitness.com to contact a local Intenza authorized service technician.

MONTHLY

Clean guide rods and lubricate with a Teflon grease if equipped with guide rods.

EVERY 6 MONTHS

Lubricate pivot bearing and linear bearings with lithium grease.

3.5 Clean The Equipment

CAUTION

Do not use any acidic cleaners. Doing so will weaken the paint or powder coatings and may void the Intenza Warranty. Never pour or spray liquids on any part of the equipment. Allow the equipment to dry completely before using.

CAUTION

If you determine that the equipment needs service, make sure that the equipment cannot be used inadvertently and ensure other users know that the machine needs service.

*To order parts or to contact a Intenza Authorized Service representative, please visit www.intenzafitness.com

Wipe all machines with a water dampened cloth and dry completely. This includes painted parts, chrome plated parts (except guide rods), plastic parts, and upholstered pads. It is important not to leave parts damp. This will increase the potential for corrosion to occur.

CAUTION

Certain anti—bacterial cleaners and other harsh cleaning agents can induce corrosion on the machine components. These solutions can also dry out and cause cracking and splitting on the upholstery.

HEAVY DUTY CLEANING

GUIDE RODS (IF EQUIPPED)	Clean and lubricate with a Teflon Spray. Be sure to coat the entire guide rod. Spraying lubricant into the cap plate bushings is also recommended
CHROMED ADJUSTMENT TUBES	Wipe away dust and dirt before applying a Teflon spray lubricant. Intenza recommends using TriFlow or a similar brand.
LINEAR BEARINGS	Clean the linear shaft and lubricate (as required) with Teflon based grease. Keeping linear bearings clean and lubricated is critical to long life and good performance
PAINTED FRAMES	If you have scuff marks, grease or a heavy dirt buildup on frame components, start with a mild soap solution or a diluted solution of a product such as Simple Green with a dilution of 32:1. If you cannot remove the marks using those methods, use a car polish/cleaner. DO NOT use solvents such as lacquer thinner, mineral spirits or acetone. For deeper scuff marks, use an automobile finish rubbing compound
UPHOLSTERY	For heavy duty cleaning, use a mild soap solution. This method should be sufficient in the majority of instances. In severe stain cases, you can use a solution of 5—10% household bleach diluted with water. Be sure to test an inconspicuous area first. DO NOT use chemical cleaners on the vinyl upholstery. You can also use a lanolin based hand cleaner to clean your upholstery. Wipe off after cleaning with a damp cloth and thoroughly dry
PLASTIC PARTS	Use a mild soap solution to clean dirt and grease marks
LABELS	Use a mild soap solution to clean dirt and grease marks
SHROUDS	Use a mild soap solution to clean dirt and grease marks

3.6 Cable Inspection & Maintenance

One of the most critical areas that require frequent inspection on any weight machine is the cable system that lifts the weight stack if the machine is equipped with those items. Sudden failure of a worn cable can, in some instances, result in injury to the user. It is the responsibility of the facility to inspect the cables frequently.

Cables are components that wear over time. This means that the more often a piece of equipment is used, the greater the likelihood that cable wear will occur.

Listed below are the areas of the cable that require inspection.

*Intenza recommends that all cables be replaced on an annual basis to maintain the safety of all users.

CABLE WEAR

Inspect all cables for any signs of wear. Pay close attention to the cable in the area of the end fittings and attachment points. Inspect the areas around the pulleys and/or cams. Shown below are examples of cables that exhibit signs of potential failure. If any of these conditions are apparent, the machine should immediately be taken out of service and repaired. Be sure to use only cables supplied by Intenza. DO NOT use cables that have fittings attached with hand crimp tools.

1. Twisted Cable (Zig—zag Pattern)



2. Break in the Cable Cover



3. Break/Bend in Cable




4. Tear in the Cable Cover



5. Stretched Cable Covering



6. Crimp Connector Dislodged

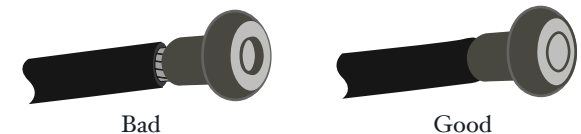

3.6 Cable Inspection & Maintenance

CAUTION

A minimum of 1 inch (25.4mm) of the threaded portion of the cable bolt must be threaded into the carriage.


No more than 1 inch (25.4 mm) of the threaded portion of the cable bolt should be visible.

CABLE TENSION

Ensure that the cables are adjusted to remove any slack using the cable adjustment plates and the threaded end fittings. These are located at the weight stack and carriage connections. You can determine if there is too much slack by performing the exercise. As you start to move a load arm or handle, the weight stacks should lift immediately. If not, the cable tension needs to be adjusted.


To adjust the cable tension, there are two ways:

1. Loosen pulley bolt enough to rotate the cable adjustment plate (See 2.3 Assembly Guide, Step 15 and Step 18).
2. Loosen the cable nut that is located on the cable bolt connected to the carriage. Tighten the cable bolt until the top plate is barely lifted off of the first weight plate and then re-tighten the cable nut.

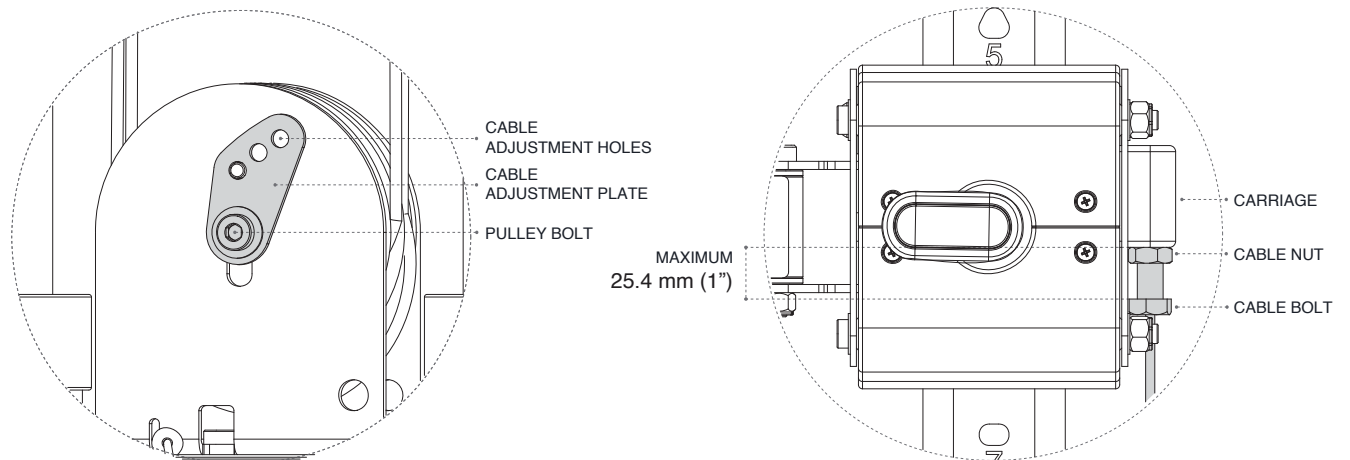

HANDLE FITTINGS (IF APPLICABLE)

Inspect the cable fittings where any handles are attached to the end of the cable. The fittings supplied with this machine are load rated snap-links. Ensure that the snap-link opens and closes easily and is fully engaged when closed. Replace the snap-link as needed.

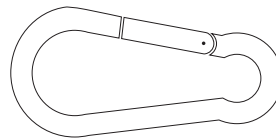

© 2023 HealthStream Taiwan Inc.

No. 28, Jiaotuzai Boulevard, Liuying District, Tainan City 736, Taiwan

2023.12.4 Version 1.1

[INTENZA FITNESS.COM](https://www.intenzafitness.com)

