

CONTENTS

EN Elliptical Trainers Owner's Manual

2

IMPORTANT SAFETY INSTRUCTIONS

WHEN USING AN ELECTRICAL APPLIANCE, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING: READ ALL INSTRUCTIONS BEFORE OPERATION.

WARNING

TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

- The Elliptical Trainer can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- · The Elliptical Trainer is only to be used with the power supply unit provided with the appliance.
- · The Elliptical Trainers are designed for aerobic exercise in a commercial or consumer environment.
- · Please check with your physician prior to begining any exercise program.
- · Heart rate monitoring systems may be inaccurate. Over exercise may result in serious injury or death. If you feel faint stop exercising immediately.
- Stop exercising immediately and consult a physician if you feel any abnormal symptoms such as fainting, dizziness, chest pain, nausea or shortness of breath.
- · Brand website: intenzafitness.com

DANGER

- · Make sure all users see a physician for a complete physical examination before they begin any fitness program.
- $\cdot\,$ Unsupervised children must be kept away from this equipment.
- · Assemble and operate the equipment on a solid level surface.
- Set the equipment a few feet away from walls or furniture, and away from sources of heat, such as radiators, heat registers and stoves. Avoid extreme temperature changes.
- · Do not place outdoors or in an enclosed swimming pool environment.
- Keep hands and loose clothing away from moving parts.
- Keep equipment away from water and moisture. Avoid dropping or spilling anything on/inside the equipment to prevent electric shock, or damage to the equipment.
- · Never leave the equipment unattended when it is plugged in. Unplug the equipment from its power source when it is not in use.
- The optional power adapter is considered a power source for self—powered equipment. Always unplug this equipment from the electrical outlet immediately after use or before cleaning.
- $\cdot\,$ Keep the optional power adapter and plug away from heated surfaces.
- · Do not insert any object into any opening, or underneath the equipment.
- $\cdot \ \, \text{Do not attempt to remove the cover or modify the equipment. Service should only be conducted by an authorized service technician.}$
- Wear shoes with rubber or high—traction soles. Do not wear shoes with heels, leather soles, cleats or spikes. Make sure no stones are
 embedded in the soles.
- · Do not use the equipment with bare feet.
- $\cdot\;$ Stop operating the equipment until any defective components are repaired.
- · SAVE THESE INSTRUCTIONS

SAVE THESE INSTRUCTIONS

WARNING

Connect this appliance to a properly grounded outlet only. Grounding Instructions.

GROUNDING INSTRUCTIONS

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord with an equipment—grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

This product is connected to 12V 80W adaptor which is 6.67A and is for use on a circuit having a nominal rating of 100—240 V and is factory—equipped with a specific electric cord and plug to permit connection to a proper electric circuit. Make sure that the product is connected to an outlet having the same configuration as the plug. If the product must be reconnected for use on a different type of electric circuit, reconnection must be made by qualified service personnel.

DANGER

Improper connection of the equipment—grounding conductor can result in risk of electric shock. Check with a qualified electrician if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product—if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

IMPORTANT SAFETY PRECAUTIONS

SAFETY PRECAUTIONS

- · Unsupervised children must be kept away from this equipment.
- · Assemble and operate the equipment on a stable base which is properly leveled.
- · Keep an open area of 3 feet by 3 feet (1000 mm x 1000 mm) behind the Elliptical clear of any obstructions including walls, furniture and other equipment.
- · Keep away from sources of heat such as radiators, heat registers and stoves. Avoid extreme temperature changes.
- · Do not use outdoors or in an enclosed swimming pool environment.
- · Keep equipment away from water and moisture. Avoid dropping anything on or spilling anything inside the equipment to prevent electric shock or damage the electronics.
- · Never leave the equipment unattended when it is plugged in. Unplug the equipment from its power source when it is not in use for a long time.
- \cdot Do not drop or insert any object, hands, or feet into any opening, or underneath the equipment.
- · Do not attempt to remove the cover or modify the equipment. Service should only be done by an authorized service technician.
- Do not use the equipment with bare feet. Wear shoes with rubber or high—traction soles. Do not use shoes with heels, leather soles, cleats or spikes. Make sure no stones are embedded in shoe soles.
- · Do not operate the equipment until the defective components are repaired.
- · Use the handrails whenever additional stability is required. In case of emergency, such as tripping, the user should grab the handrails.


Intenza Elliptical Trainers Parts List

Open the shipping carton. Remove all parts from the carton and cardboard inserts. Before beginning assembly, verify that the following hardware items are packed with the equipment. Do not attempt to move the equipment off the pallet by yourself. At least two people are required for safe moving or lifting. Please use safe lifting techniques. Please use hex wrench (3mm, 5mm, 6mm) and open wrench (13mm) to assemble the Elliptical Trainer.







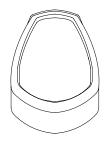


1. RIGHT BUG QTY 1

2. LEFT BUG QTY 1


3. FRONT POST QTY 1

4. FRONT POST COVER QTY 1



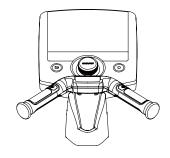



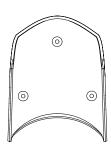

5. CONSOLE FOR 550 ETXe2 QTY 1


6. 450 SERIES i2S CONSOLE ASSEMBLY QTY 1


7. CONSOLE COVER FOR ETXe2 QTY 1

8. CONSOLE COVER FOR ETXI QTY 1





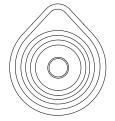

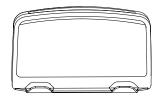


9. LEFT CUP HOLDER BRACKET QTY 1

10. RIGHT CUP HOLDER BRACKET QTY 1


11. CUP HOLDER QTY 2

12. IPAD RACK FOR 450ETXiS QTY 1

Intenza Elliptical Trainers Parts List

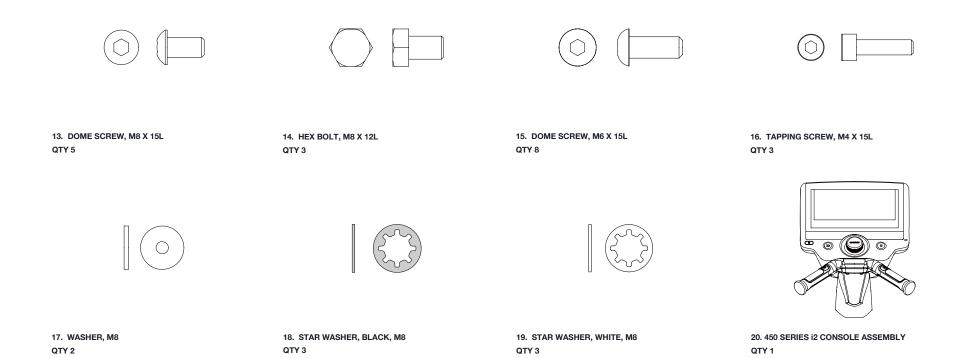

STEP 1

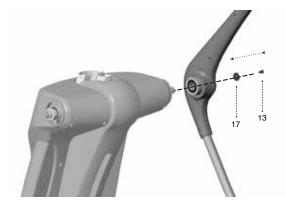

ASSEMBLE THE RIGHT HANDLE BAR.


PLEASE NOTE

Align the handle bar to the pivot point.

COMPONENTS AND TOOLS

Dome screw, M8 x 15L(13), Washer, M8(17), Hex wrench—6mm

STEP 3

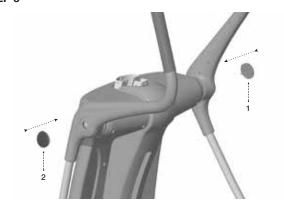


ASSEMBLE THE BUG CAP.

PLEASE NOTE

Identify the Right and Left side bug caps as shown above. Remove adhesive protective cover from the back of the bug cap. Attach the cap to the handlebar.

STEP 2

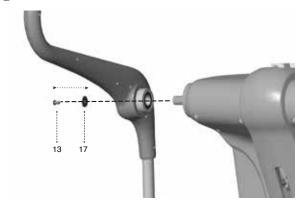

ASSEMBLE THE LEFT HANDLE BAR.


PLEASE NOTE

Align the handle bar to the pivot point.

COMPONENTS AND TOOLS

Dome screw, M8 x 15L(13), Washer, M8(17), Hex wrench—6mm

STEP 4

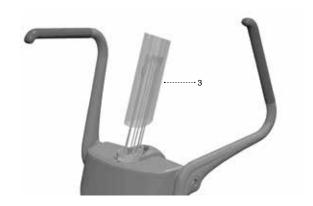


ASSEMBLE THE FRONT POST.

PLEASE NOTE

Make sure the cables are not pinched during front post installation.

STEP 5

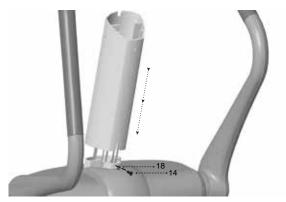


ASSEMBLE THE FRONT POST.

PLEASE NOTI


Screw #14 and washer #18 as shown, are pre—assembled and will need to be properly tightened during the front post installation. Refer to step 6. **COMPONENTS AND TOOLS**

Star washer, Black, M8(18), Hex bolt, M8 x 12L(14), Open wrench—13mm STEP 7

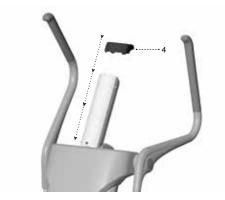

ASSEMBLE THE FRONT POST COVER.

STEP 6

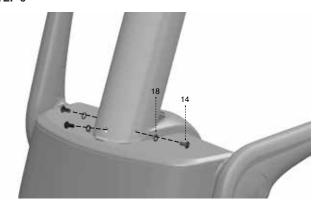


ASSEMBLE THE FRONT POST.

PLEASE NOTE

Tighten the front screw first. Make sure all 3 screws are tightened. ${\tt COMPONENTS}$ and ${\tt TOOLS}$

Star washer, Black, M8(18), Hex bolt, M8 x 12L(14), Open wrench—13mm

STEP 8-1-1

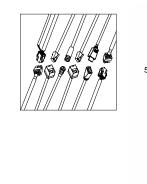



INSTALLING THE 550ETXe2 CONSOLE—ASSEMBLE THE CONSOLE. PLEASE NOTE

Connect the console cable, TV coax cable, TV power, RJ45 cable and HDMI cable, and carefully insert the cable into the front post.


STEP 8-1-2



INSTALLING THE 550ETe2 CONSOLE—ASSEMBLE THE CONSOLE. COMPONENTS AND TOOLS

Dome screw, M8 x 15L(13), Star washer, White, M8(19)

STEP 8-1-3

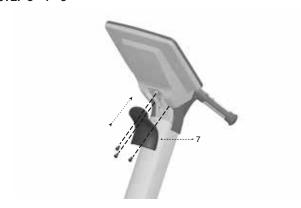

INSTALLING THE 550ETXe2 CONSOLE—CONSOLE COVER.
PLEASE NOTE
Install 3 screws and tighten.
COMPONENTS AND TOOLS


Tapping screw, M₄ x 15L (16), Hex wrench—3mm

PLEASE NOTE

Make sure the post is properly aligned. Install and tighten the front screw first, then tighten the remaining 2 screws.

This screw is pre—assembled on the machine but not locked tight. Please ensure it is locked tightly during installation.


STEP 8-2-1

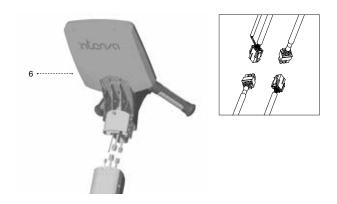

INSTALLING THE 450 ETXi2, 450 ETXi2S CONSOLE—ASSEMBLE THE CONSOLE. PLEASE NOTE

Connect the console cable, and carefully insert the cable into the front post.


STEP 8-2-2

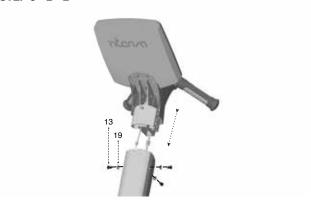

INSTALLING THE 450 ETXi2, 450 ETXi2S CONSOLE—ASSEMBLE THE CONSOLE. COMPONENTS AND TOOLS

Dome screw, M8 x 15L(13), Star washer, White, M8(19)

STEP 8-2-3

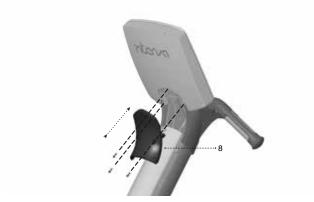

INSTALLING THE 450 ETXi2, 450 ETXi2S CONSOLE—CONSOLE COVER. PLEASE NOTE

Install 3 screws and tighten.

COMPONENTS AND TOOLS


Tapping screw, M₄ x 15L (16), Hex wrench—3mm

PLEASE NOTE

Make sure the post is properly aligned. Install and tighten the front screw first, then tighten the remaining 2 screws.

This screw is pre—assembled on the machine but not locked tight. Please ensure it is locked tightly during installation.



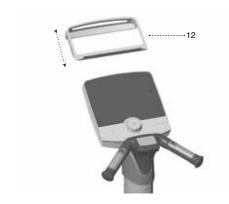

INSTALL THE IPAD RACK.

STEP 9



ASSEMBLE THE CUP HOLDER BRACKETS.


PLEASE NOT

Identify the Right and Left bracket as shown above. Attach the brackets using 4 dome screws as shown.

COMPONENTS AND TOOLS

Dome screw, M6 x 15L(15), Hex wrench—5mm

STEP 11

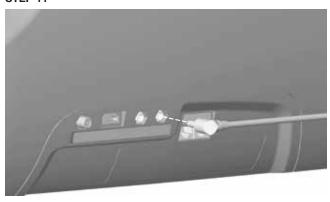

CONNECT THE ADAPTOR. COMPONENTS AND TOOLS

Please use 12V 80W adaptor and insert adaptor's DC plug into DC power jack on the Elliptical cardio equipment.

STEP 10



ASSEMBLE THE CUP HOLDERS.


PLEASE NOTE

Install the cup holders and secure with 4 dome screws as shown. COMPONENTS AND TOOLS

Dome screw, M6 x 15L(15), Hex wrench—5mm

Safety Space

MAKE SURE THAT YOU MAINTAIN THE PROPER SAFETY SPACE, AS SHOWN BELOW, AROUND THE EQUIPMENT

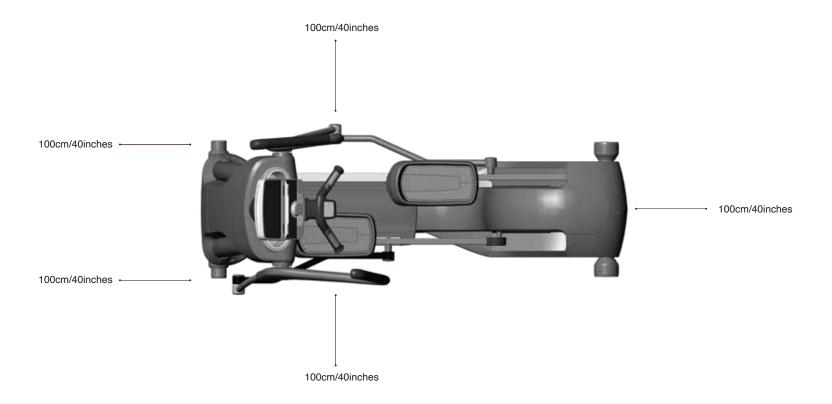

550 ETXe2 Entertainment Console Overview

Language

LANGUAGE

Arabic, Dutch, English (UK English), English (US English), Finnish, French, German, Hungarian, Japanese, Korean, Persian, Polish, Portuguese, Russian, Spanish, Simplified Chinese, Traditional Chinese, Turkish, Lithuanian, Italian, Danish. 21 languages are offered.

≜ Login ✓ LOGIN

Press to login

∪SB

Displays USB connection status

○ • ○ SWIPE

Swipe screen horizontally to the next page



HOMEPAGE PICTURE

Homepage picture can be customised

START QUICK START

Start a workout immediately through bypassing any setting

Time

FAVOURITE PROGRAMS

O Distance Allows easy access to frequently used programs



/ Evercise

EXERCISES

HR Control/Preset/Target (Time/Distance/Calories) /Custom/Race/Fitness Test. Allows users to select programs to setup "goal" or "customise" program

Entertainment >

FAVOURITE

Allows easy access to frequently used entertainment

ENTERTAINMENT

Phor

TV/IntenzacastTM/Internet/Video/Audio/Virtual scenery/YouTube/HDMI. During workouts you can switch between different types of entertainment on the console

A ENERGY SAVER

Use this mode to minimise power consumption when 550 ETXe2 is not in use. Press button to put 550 ETXe2 into energy saver mode after ending a workout. Press to "wake up" the 550 ETXe2

B READING AND TABLET RACK

Built—in holder used for personal devices, books or tablets

C HEADPHONE JACK

Allows users to plug in headphones

D OPTIONAL RFID/NFC

Allows facility operators to offer members swipe facility identification card on the console

E USB PORT

Allows for data download—read and play audio/video files

F HOME SCREEN

See home screen table to the left



550 ETXe2+ Entertainment Console Overview

Language

LANGUAGE

Arabic, Dutch, English (UK English), English (US English), Finnish, French, German, Hungarian, Japanese, Korean, Persian, Polish, Portuguese, Russian, Spanish, Simplified Chinese, Traditional Chinese, Turkish, Lithuanian, Italian, Danish, Svenska, Norsk. 23 languages are offered

△ Login ✓ LOGIN

Press to login

∪SB

Displays USB connection status

○ • ○ SWIPE

Swipe screen horizontally to the next page



HOMEPAGE PICTURE

Homepage picture can be customised

START QUICK START

Start a workout immediately through by passing any setting

Time

FAVOURITE PROGRAMS

Open the Allows easy access to frequently used programs

(Calories

Exercise **EXERCISES**

HR Control/ Preset/ Target (Time/ Distance/ Calories)/ Custom/ Race/ Fitness Test. Allows users to select programs to setup "goal" or "customise" programs.

Entertainment > FAVOURITE

Allows easy access to frequently used entertainment

TV/ IntenzacastTM/ Internet/ App/ Virtual Scenery/ YouTube* **/ HDMI.

During workouts users can switch between different entertainment types on the console.

A ENERGY SAVER

Use this mode to minimise power consumption when 550 ETXe2+ is not in use. Press button to put 550 ETXe2+ into energy saver mode after ending a workout.

Press to "wake up" the 550 ETXe2+

B READING AND TABLET RACK

Built—in holder used for personal devices, books or tablets

C HEADPHONE JACK

Allows users to plug in headphones

D OPTIONAL RFID/NFC

Fitness facility owners can order this option for their users, allowing them to swipe facility identification card on the console.

E USB PORT

Allows for data download

F HOME SCREEN

See home screen table to the left

*Similar operation for Youku (China). **Similar operation for Aparat (Iran).



450ETXi2 Interactive Console Overview

LANGUAGE

During program set—up, press **HOLD** to display the language page. Arabic, Dutch, English (UK English), English (US English), Finnish, French, German, Hungarian, Japanese, Korean, Persian, Polish, Portuguese, Russian, Spanish, Simplified Chinese, Traditional Chinese, Turkish, Lithuanian, Italian, Danish, Svenska, Norsk. 23 languages are offered



QUICK START

Allows you to begin a workout with one key press. The default speed of Quick Start is rkm/h (o.6mph)



TARGET TIME

Target workout time to meet user training goals. By setting time, user may choose program by turning to enter into the program



TARGET DISTANCE

Target workout distance to meet user training goals. By setting distance, you may choose program by turning to enter into the program



TARGET CALORIE

Target workout calories to meet user training goals. By setting calories you may choose program by turning to enter into the program



FITNESS TEST

VO2 Max technology is useful in measuring an individual's ability to transport and utilise oxygen during exercise progression



RACE

Offer a fun and challenging workout option. Users can compete against, or with, previous champions



HRC

Offers 4 Heart Rate Control workout options. HRC workout program allow users to program their target heart rate zone

Indust PRESET

Offers 20 preset programs

A HOME SCREEN

Industrial grade 12" colour TFT LCD display for longer lifetime. Turn Uni— $Dial^{TM}$ to select program

B ⇒ BACK/HOLD

BACK During program set—up press this key to go back.

C ENERGY SAVER

Use this mode to minimise power consumption when 450 ETXi2 is not in use. Press this button to put 450 ETXi2 into energy saver mode after ending your workout. Press to "wake up" the 450 ETXi2

D QR CODE

A link to the Intenza website

E QUICK START

QUICK Press this key to enter the manual workout mode START promptly, without selecting a workout program

■ STOP KEY

Press key to return to the first page. Pressing **STOP** once will end the workout program and the message bar will show the workout summary. Press **STOP** again to promptly exit the workout program

G USB PORT

Software update/install only

H C—SAFE PORT

Standard C—SAFE power supports the power supply of external tools.



450ETXi2S Interactive Console Overview

A PROFILE WINDOW

Light columns show the information for setting —up a workout

TIME Elapsed time since beginning the workout



HR Heart Rate can be detected if the user is wearing a Polar heart rate chest strap, or by grasping the contact heart rate grips throughout workouts

B MESSAGE BAR

During program set—up, operating instructions will be displayed in the message bar. During a workout exercise data listed below will be shown:



CALORIES

Number of calories burned since start of workout



WATTS

Effort level in Watts. The Watt is a unit of power output or the expression of the mechanical rate of work



SPM (Stride Per Minute)

The number of strides at which you are currently pedaling in stride per minute.



DISTANCE

Total number of miles or km run so far



LEVEL

Intensity of resistance level.

C ⇒ BACK/HOLD

BACK During program set up, press this key to go back.

During workouts, display information switches between both exercise parameters in each message bar. Press **HOLD** to display continuously through out the workout

D QUICK START

QUICK START

Press this key to enter the manual workout mode promptly, without selecting a workout program

E STOP KEY

STOF

Press to return to the first page. Press stop once to end the workout program—message bar will show the workout summary. Press stop again to exit the workout program promptly

F C—SAFE PORT

Standard C—SAFE power supports the power supply of external tools.



Begin The Workout

Before beginning any fitness program, see your physician for a complete physical examination. To maintain your balance, always grasp the handlebar when you step on, or off, the foot pedals, or use the keypads.

- 1 Hold on to the handlebar and step on the foot pedals.
- 2 When you are in a stable position, begin to pedal.





Maintenance

PREVENTATIVE MAINTENANCE TIPS

With durable, high performance components, the Intenza Ellipticals Trainer is designed for commercial health club usage with minimal maintenance required.

WARNING

- 1 The safety level of the equipment can be maintained only if it is examined regularly for damage and wear, e.g. connection points.
- ² Replace defective components immediately and/or keep the equipment out of use until repair.

To keep your Intenza Ellipticals working properly, Intenza strongly recommends performing daily, and regularly scheduled, preventative maintenance measures as outlined below.

DAILY MAINTENANCE

- ¹ Locate the product in a dry, cool place.
- ² Before and after each exercise session, ensure the area around the Intenza Ellipticals are free of obstacles and any clutter that may interfere with Intenza Ellipticals operation.
- 3 Remove excessive accumulations of dust, dirt, and other substances by using a clean, soft cloth and a non—abrasive liquid cleaner.
- 4 Wipe down the exterior of the console, stick shift, handlebars and contact heart rate grips.
- ⁵ Avoid getting extra moisture on the console. Keeping the console free of fingerprints and sweat will extend its lifespan.
- 6 Never use ammonia, acid—based, or petroleum—based solvents on any surface area of the Intenza Ellipticals as it may damage Intenza products.
- $^{7}\ \mathrm{Do}\ \mathrm{not}\ \mathrm{spray}\ \mathrm{cleaning}\ \mathrm{liquid}\ \mathrm{onto}\ \mathrm{the}\ \mathrm{display}\ \mathrm{screen}\ \mathrm{or}\ \mathrm{heart}\ \mathrm{rate}\ \mathrm{grips}.$

REGULAR MAINTENANCE

- ¹ Inspect the console mounting screws for security, and retighten if necessary.
- ² Inspect the display panel keypads for wear and tear.
- 3 Check that the pedals and shrouds are secure.
- ⁴ Clean the ramp tracks.

Self Diagnosis

Your Service Representative may need to check accumulated data about the past usage of your Elliptical Trainer, test the function and check for error messages. For these reasons, the Intenza Ellipticals are equipped with a service mode which has diagnostic reports that can assist with troubleshooting. InCareTM Online function is a service diagnostic process that can automatically send out detected error message to Intenza customer service. For more information about self diagnosis, please contact your local dealer or refer to the service manual.

Troubleshooting

PLEASE NOTE Replace defective components immediately

or remove the equipment from use until it is repaired.

WHEN TO CALL FOR HELP


- ¹ Verify the symptom and review the operating instructions.
- ² The problem may be unfamiliarity with the product, its features or the workout programs.
- ³ Check the error message, then follow the instructions in the service manual.
- 4 When the display shows NEED MAINTENANCE, it is suggested to contact your local distributor for service immediately.
- ⁵ If the problem you encounter has not been solved by the above steps, and the Intenza Ellipticals are still not operational. Locate and document the unit serial number and contact your local dealer.
- ⁶ Send the diagnosis report (Please refer to Section 5.2 Self Diagnosis for more information) and serial number to your local distributor for service.

WHERE IS THE PRODUCT SERIAL NUMBER

The serial number contains six digits, and there are two locations you can find the Intenza Ellipticals serial number:

- ¹One is located on the front of the Intenza Ellipticals, near the power switch.
- ² One is located on the front post.



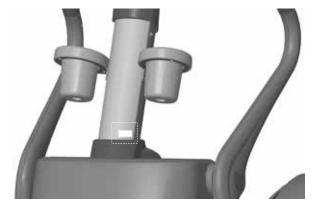

Error Message

When the display shows error message, please contact your local Authorized Dealer or Service Center.

Intenza 550ETXe2 Elliptical Trainer Exploded Drawing And Parts List



NO	ITEM	NO	ITEM	NO	ITEM
1	Console, w/handle	31	Cover, upright, rear, btm	61	Bearing, ball, 6004ZZ
2	Cover, console, mount, btm	32	Cover, upright, rear, top, inj	62	Shaft, pulley, step—up
3	Post, upright	33	Cap, stabilizer	63	Cover, side, top, R
4	Cover, upright	34	Foot, adjustable	64	Bearing, pillow block
5	Holder, bottle	35	Generator, w/bracket	65	Cover, rear, inside, L
6	Bracket, holder, bottle, R	36	LCB, w/heatsink	66	Cable, signal, frame, w/core
7	Bracket, holder, bottle, L	37	Cover, rear, top, injection	67	Cable, TV
8	Holder, bottle	38	Cover, rear, inside, R	68	Cable, LCB, frame + core
9	Cover, upright, top	39	Cover, crankarm	69	Cable, HDMI
10	Cover, upright, front, top	40	Cover, side, bottom, R, inj	70	Adaptor, 12V
11	Handlebar, L	41	Tube, fix, cover	71	Cable, connect, frame, RJ45
12	Handlebar, R	42	Crankarm, coated	72	Cable, connect, frame
13	Decal, bug, handlebar, R	43	Pulley, input, w/shaft	73	Cable, generator, power input
14	Decal, bug, handlebar, L	44	Ramp	74	Cable, hybrid, torque control
15	Post, upright, L, coated	45	Cover, linkarm		
16	Post, upright, R, coated	46	Cross, coated	-	
17	Mount, post, top, coated	47	Cover, stairarm, injection	_	
18	Cover, upright, btm, w/cable	48	Block, pivot, stairarm	_	
19	Cover, upright, rear, top	49	Bearing	-	
20	PCB, w/heatsink	50	Shaft, ramp		
21	Tube, fixramp, coating	51	Frame, main, coated		
22	Linkarm	52	Bracket, battery	-	
23	Cover, pivot, linkarm	53	Pulley, step—up	-	
24	Coating, cover, ramp, side	54	Belt, drive	-	
25	Stairarm, R, coated	55	Belt, drive	_	
26	Coating, cover, ramp, side	56	Cover, side, bottom, L w/clip	•	
27	Stairarm, L, coated	57	Wheel, moving	_	
28	Cover, pedal	58	Bracket, wheel	_	
29	Wheel, w/bearing	59	Cap, wheel	_	
30	Sheet, pedal	60	Cover, side, top, L	_	

Specifications: Intenza 550ETXe2 Elliptical Trainer

Design Use Commercial
Maximum User Weight 181kgs/400 lbs
Step Up Height 35 cm (13.7 in)

Stride Length 52—55 cm (20.4—21.6 in)

Pedal to pedal distance 6 cm (2.3 in)

CONSOLE

Type 16" TFT capacitance touch screen monitor

Display HR, Pace, Time, Intensity, Calories, Distance, SPM, Level, Workout summary, Workout Profile

Languages 21 Languages

Summaries Total elapsed time of workout, total calories burned, total distance, average heart rate, average SPM, average gradient,


average watts generated, average level, resistance/heart rate profile record of workout

Workout Quick start, Preset programs, Target programs, Heart rate programs, Custom programs, Race programs, Fitness test

Heart rate monitor Polar telemetry heart rate monitoring system

MODEL 550ETXe2 MODEL 550ETXe2	
LENGTH 2,090 mm 83 inches LENGTH 2,200 mm 87	7 inches
WIDTH 840 mm 33 inches WIDTH 780 mm 31	rinches
HEIGHT 1,720 mm 66 inches HEIGHT 100 mm 39	9 inches
WEIGHT 185 kgs 408 lbs WEIGHT 250 kgs 55	rı İbs

Intenza 450ETXi2 Elliptical Trainer Exploded Drawing And Parts List

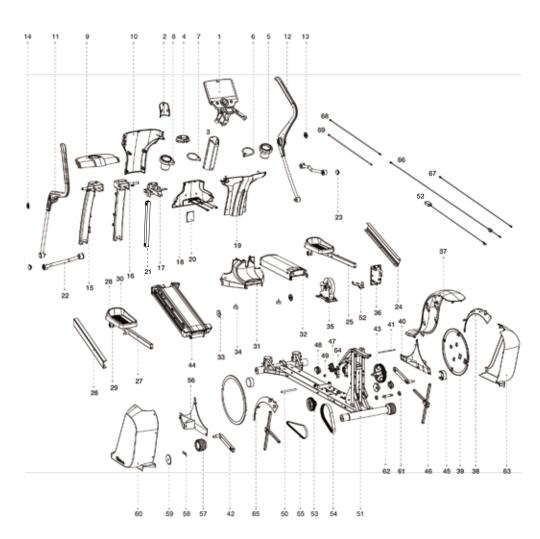

NO	ITEM	NO	ITEM	NO	ITEM
1	Console, 450 ETXi2	31	Cover, upright, rear, btm	61	Bearing, ball, 6004ZZ
2	Cover, console, mount, btm	32	Cover, upright, rear, top, inj	62	Shaft, pulley, step—up
3	Post, upright	33	Cap, stabilizer	63	Cover, side, top, R
4	Cover, upright	34	Foot, adjustable	64	Bearing, pillow block
5	Holder, bottle	35	Generator, w/bracket	65	Cover, rear, inside, L
6	Bracket, holder, bottle, R	36	LCB, w/heatsink	66	Cable, signal, frame, w/core
7	Bracket, holder, bottle, L	37	Cover, rear, top, injection	67	Cable, LCB, frame + core
8	Holder, bottle	38	Cover, rear, inside, R	68	Cable, generator, power input
9	Cover, upright, top	39	Cover, crankarm	69	Cable, hybrid, torque control
10	Cover, upright, front, top	40	Cover, side, bottom, R, inj		
11	Handlebar, L	41	Tube, fix, cover	-	
12	Handlebar, R	42	Crankarm, coated	-	
13	Decal, bug, handlebar, R	43	Pulley, input, w/shaft	-	
14	Decal, bug, handlebar, L	44	Ramp	-	
15	Post, upright, L, coated	45	Cover, linkarm	_	
16	Post, upright, R, coated	46	Cross, coated	_	
17	Mount, post, top, coated	47	Cover, stairarm, injection	-	
18	Cover, upright, btm, w/cable	48	Block, pivot, stairarm	-	
19	Cover, upright, rear, top	49	Bearing	_	
20	PCB, w/heatsink	50	Shaft, ramp	_	
21	Tube, fixramp, coating	51	Frame, main, coated	_	
22	Linkarm	52	Adapter, 12V	_	
23	Cover, pivot, linkarm	53	Pulley, step—up	_	
24	Coating, cover, ramp, side	54	Belt, drive	_	
25	Stairarm, R, coated	55	Belt, drive	_	
26	Coating, cover, ramp, side	56	Cover, side, bottom, L w/clip)	
27	Stairarm, L, coated	57	Wheel, moving	_	
28	Cover, pedal	58	Bracket, wheel	_	
29	Wheel, w/bearing	59	Cap, wheel	_	
30	Sheet, pedal	60	Cover, side, top, L	_	

Specifications: Intenza 450ETXi2 Elliptical Trainer

Design Use Commercial
Maximum User Weight 181kgs/400 lbs
Step Up Height 35 cm (13.7 in)

Stride Length 52—55 cm (20.4—21.6 in)

Pedal to pedal distance 6 cm (2.3 in)

CONSOLE

Type 12" Color TFT LCD display

Display HR, Watt, Time, Speed, Calories, Distance, SPM, Level, Workout Summary, Workout Profile

Language 23 countries


Summaries Total elapsed time of workout, total calories burned, total distance, total METs generated, heart rate profile record

Workout Fitness Test, HR Control, Race, Quick Start, Advanced Program, Target Program

Heart rate monitor Polar telemetry heart rate monitoring system

ASSEMBLY DIMENSIONS			SHIPPING DIMENSION	S	
MODEL	450ETXi2		MODEL	450ETXi2	
LENGTH	2,090 mm	83 inches	LENGTH	2,200 mm	87 inches
WIDTH	840 mm	33 inches	WIDTH	780 mm	31 inches
HEIGHT	1,720 mm	66 inches	HEIGHT	100 mm	39 inches
WEIGHT	186 kgs	410 lbs	WEIGHT	251 kgs	553 lbs

Intenza 450ETXi2S Elliptical Trainer Exploded Drawing And Parts List

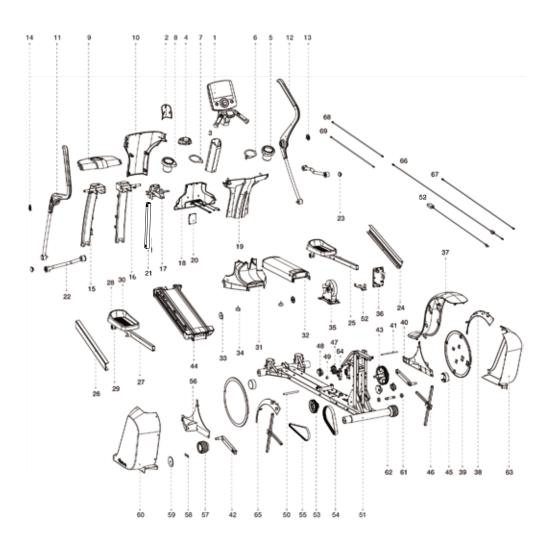

NO	ITEM	NO	ITEM	NO	ITEM
1	Console, 450ETXi2S	31	Cover, upright, rear, btm	61	Bearing, ball, 6004ZZ
2	Cover, console, mount, btm	32	Cover, upright, rear, top, inj	62	Shaft, pulley, step—up
3	Post, upright	33	Cap, stabilizer	63	Cover, side, top, R
4	Cover, upright	34	Foot, adjustable	64	Bearing, pillow block
5	Holder, bottle	35	Generator, w/bracket	65	Cover, rear, inside, L
6	Bracket, holder, bottle, R	36	LCB, w/heatsink	66	Cable, signal, frame, w/core
7	Bracket, holder, bottle, L	37	Cover, rear, top, injection	67	Cable, LCB, frame + core
8	Holder, bottle	38	Cover, rear, inside, R	68	Cable, generator, power input
9	Cover, upright, top	39	Cover, crankarm	69	Cable, hybrid, torque control
10	Cover, upright, front, top	40	Cover, side, bottom, R, inj		
11	Handlebar, L	41	Tube, fix, cover	-	
12	Handlebar, R	42	Crankarm, coated	-	
13	Decal, bug, handlebar, R	43	Pulley, input, w/shaft	_	
14	Decal, bug, handlebar, L	44	Ramp	=	
15	Post, upright, L, coated	45	Cover, linkarm		
16	Post, upright, R, coated	46	Cross, coated		
17	Mount, post, top, coated	47	Cover, stairarm, injection		
18	Cover, upright, btm, w/cable	48	Block, pivot, stairarm		
19	Cover, upright, rear, top	49	Bearing		
20	PCB, w/heatsink	50	Shaft, ramp	_	
21	Tube, fixramp, coating	51	Frame, main, coated	_	
22	Linkarm	52	Adaptor, 12V	_	
23	Cover, pivot, linkarm	53	Pulley, step—up		
24	Coating, cover, ramp, side	54	Belt, drive		
25	Stairarm, R, coated	55	Belt, drive	_	
26	Coating, cover, ramp, side	56	Cover, side, bottom, L w/clip	_	
27	Stairarm, L, coated	57	Wheel, moving		
28	Cover, pedal	58	Bracket, wheel	_	
29	Wheel, w/bearing	59	Cap, wheel	_	
30	Sheet, pedal	60	Cover, side, top, L	_	

Specifications: Intenza 450ETXi2S Elliptical Trainer

Design Use Commercial
Maximum User Weight 181kgs/400 lbs
Step Up Height 35 cm (13.7 in)

Stride Length 52—55 cm (20.4—21.6 in)

Pedal to pedal distance 6 cm (2.3 in)

CONSOLE

Type LED display

Display HR, Watt, Time, Speed, Calories, Distance, SPM, Level, Workout Summary, Workout Profile

Summaries Total elapsed time of workout, total calories burned, total distance, total METs generated, heart rate profile record

Workout Fitness Test, Quick Start, Advanced Program, Target Program

Heart rate monitor Polar telemetry heart rate monitoring system

ASSEMBLY DIMENSIONS		SHIPPING DIMENSIONS	SHIPPING DIMENSIONS					
MODEL	450ETXi2S	MODEL 450ETXi2S						
LENGTH	2,090 mm 83 inches	LENGTH 2,200 mm 87 inches						
WIDTH	840 mm 33 inches	WIDTH 780 mm 31 inches						
HEIGHT	1,720 mm 66 inches	HEIGHT 1,000 mm 39 inches						
WEIGHT	183.5 kgs 405 lbs	WEIGHT 249 kgs 548 lbs						

DESIGNED, ENGINEERED AND BUILT IN TAI	WAN
© 2024 HealthStream Taiwar No. 28, Jiaotuizai Boulevard, Liuying District, Tainan City 736, Printed in	Taiwan
INTENZAFITNES	SS.COM